

Concelo.
entro

FRONT PANEL
TEMPLATE


TO SUIT BLUM LEGRABOX

PLEASE WATCH
INSTALLATION VIDEO FIRST



SCAN ME

DOOR CENTRE

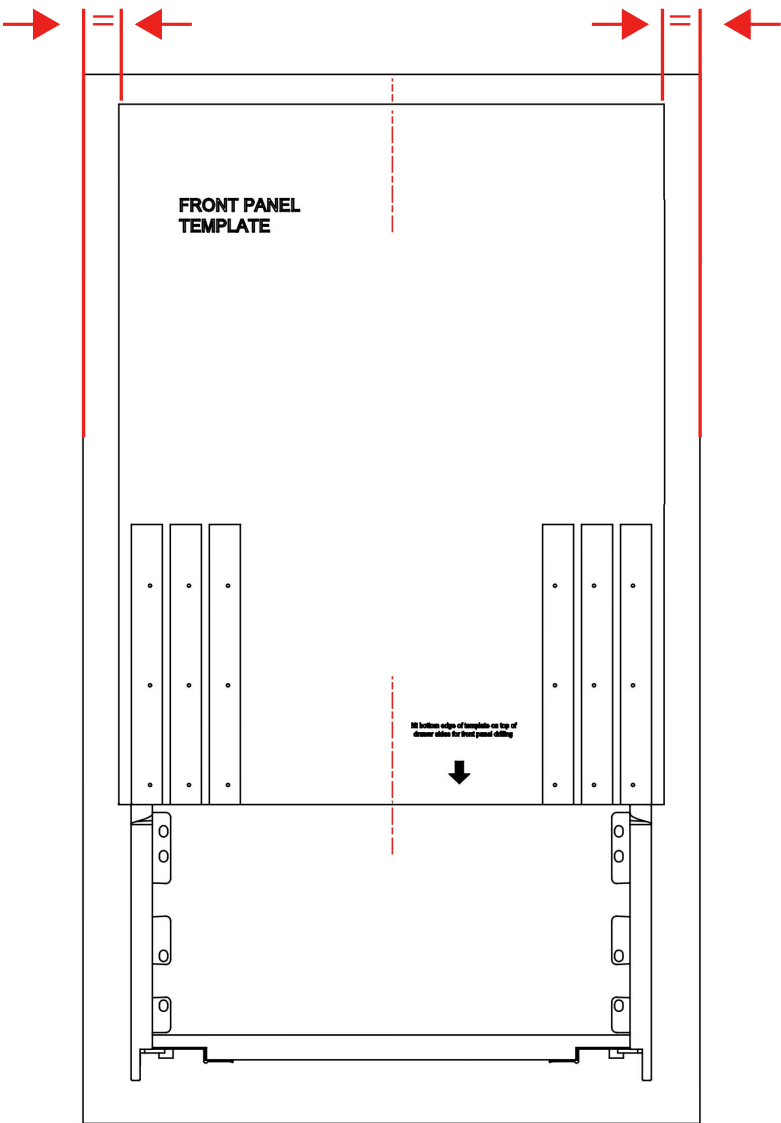

Sit bottom edge of template on top of
drawer sides for front panel drilling.

DRILL: Ø2 X 5mm deep




TOP HOLE HEIGHT
2X16L & 2X20L
MODELS

TOP HOLE HEIGHT
2X13L & 2X15L
MODELS

COMMON BOTTOM
HOLE HEIGHT

Sit bottom edge of template on top of
drawer sides for front panel drilling.



CE-450

CE-400

CE-350

CE-350

CE-400

CE-450

L



R



CE-350-216 [BL]

CE-400-220 [BL]

CE-450-220 [BL]

L



R



L



R



CE-350-213 [BL]

CE-400-215 [BL]

CE-450-215 [BL]

L



R



DRILL: Ø5 X 13mm deep


CABINET TEMPLATE

TO SUIT BLUM LEGRABOX

CABINET FRONT LEFT



Align to front edge of
left hand cabinet side

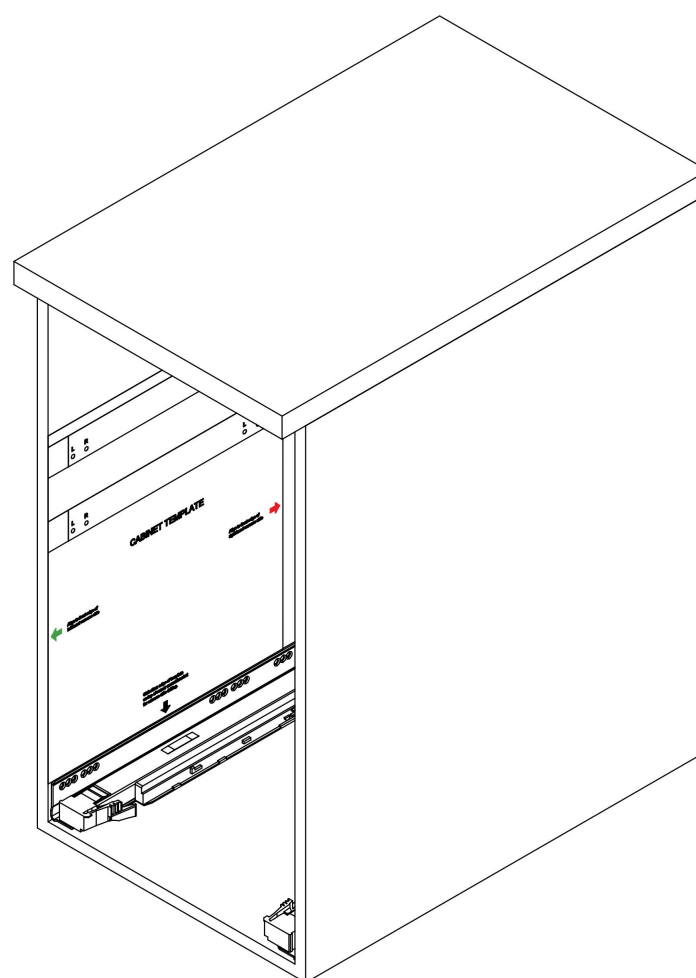

CABINET FRONT RIGHT

Align to front edge of
right hand cabinet side



Sit bottom edge of template
on top of runner mount bracket
for cabinet side drilling.

